 
 


 


**Infrared Stereo Wireless
Headphone
HE-102**

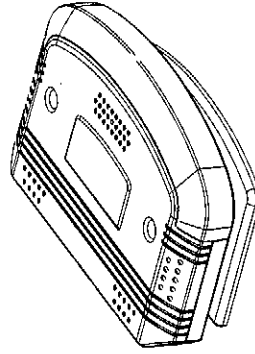 


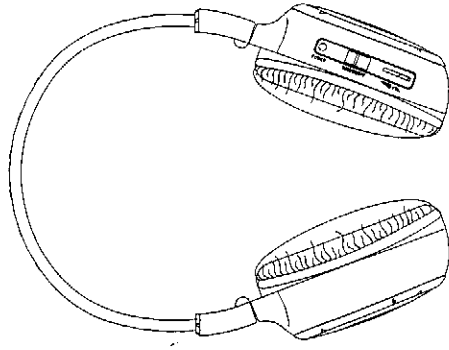

Thank-you for purchasing the Infrared Stereo Wireless Headphones. No more annoying cables, you can enjoy great sound and freedom of movement with your new headphones. Please read this instruction manual before using your headphones.

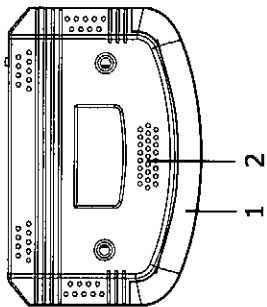

(Front)

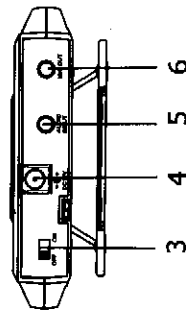

(Back)

Figure 1

1. Transmitter (Figure 1)
- (1) Infrared and Power LED
- (2) Inbuilt Microphone
- (3) Power switch ON/OFF
- (4) DC power supply input jack
- (5) Audio signal input jack
- (6) Microphone output jack

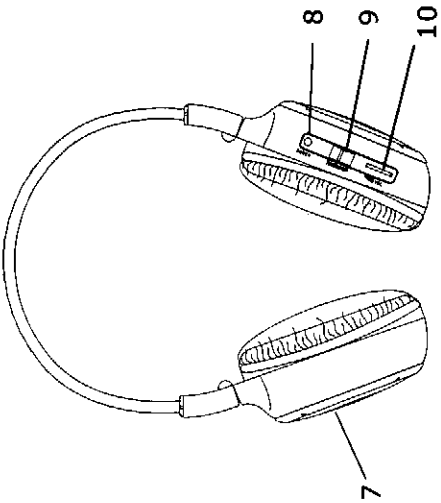 


Figure 2

2. Headphone (Figure 2)
- (7) Batteries Compartment cover
- (8) Power LED indicator
- (9) Power Switch ON/OFF
- (10) Volume adjust knob

System Components:

- (1) Transmitter 1pcs
- (2) Headphone 1pcs
- (3) AC adapter(DC12V150mA,AC120V) 1pcs
- (4) 3.5mm RCA Audio cable 1pcs
- (5) Microphone cable 1pcs
- (6) Connecting cable 1pcs

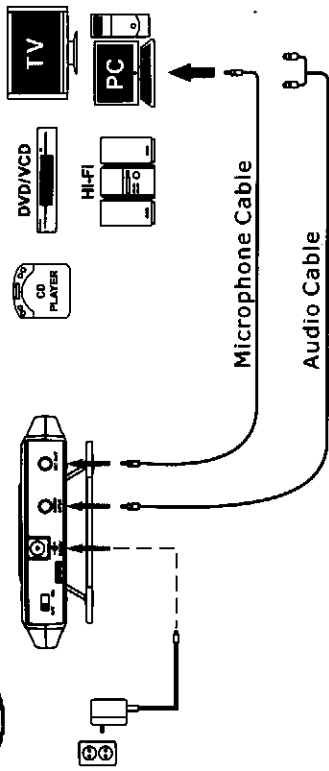 


Figure 3

Transmitter Installation

1. Insert the plug of AC adapter into 120V mains power socket, then connect the power cable of AC adapter to DC power supply input jack of transmitter.
2. Connect the audio input socket of transmitter to audio source with the supplied audio cable.

Note: If you want to talk on the internet, you can do so using the inbuilt microphone in the transmitter. Simply connect the transmitter to a PC or laptop by connecting the microphone output socket on the transmitter to the microphone input socket on the PC/laptop using the microphone cable supplied.

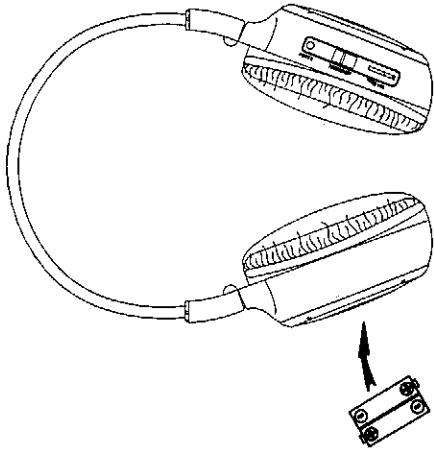 


Figure 4

Installing/Changing batteries in headphones

1. Open the battery compartment cover located on the side of headphones.
2. Install 2 X AAA size batteries into the battery compartment, ensuring the positive and negative terminals of the batteries are inserted correctly.

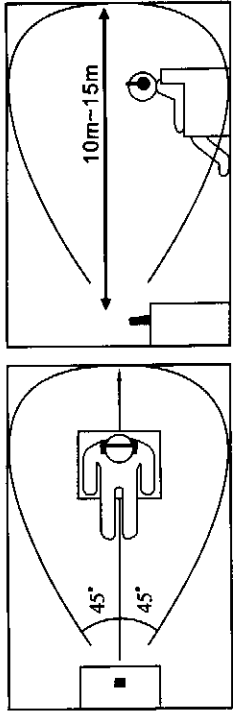 


Figure 5

Using the Infrared Wireless Stereo Headphone

1. Please use the headphones in the range as shown in figure 5.
2. The infrared LEDs of transmitter must directly point to the headphones. There must be no obstacles in the path of the transmitted infrared light between the transmitter and the headphones.
3. The transmitter's LED will light up when the transmitter is switched on.
4. Turn on the audio/video source connected to the transmitter.
Note: When the transmitter is switched on, the transmitter will automatically shut-down after 3-5 minutes if no audio signal has been received into the transmitter. When in this state, the transmitter will automatically start up again as soon as it has received an audio input signal.
5. Switch on and adjust the headphone's volume to your desired level.
Note: The headphones have an auto shut down & auto mute function. Auto mute function: When the transmitter turns off or the headphones don't receive an infrared signal, the headphones will automatically shut down and mute. Auto shut down function: After 3-5 minutes, if the headphones don't receive an infrared signal, the headphones will automatically shut down and the LED indicator light will turn off.

Technical Specifications

System:	Infrared light(wave length: 850nm)
Carrier frequency:	2.3MHz for left channel 2.8MHz for right channel
Audio Mode:	Stereo
S/N Ratio:	> 75dB
Channel Separation:	> 35dB
Distortion:	< 1%
Frequency Response:	30~20,000Hz